



To avoid damage: before adjusting the hooks, make sure the plastic bolts are sufficiently unscrewed.

SLIDE G2 WOOD