



To avoid damage: before adjusting the hooks, make sure the plastic bolts are sufficiently unscrewed.

**SLIDE G3 WOOD**